

Air Conditioner Filter

- A filter is located in the air intake vent, usually located in the hallway ceiling.
- This filter needs to be cleaned periodically (annually) to maintain adequate airflow through the vent.
- A handyman with a small ladder can easily access and remove the filter which can be cleaned by gently clearing the accumulated fluff and dust from the filter membrane followed by washing with a low-pressure hose.
- Allow the filter to air dry before replacing into the vent.